

User Guide



Mobileye® Fleet Management System



Contents

Introduction	4
Fleet Center	
	5
Fleets	5
+ Create fleet	5
+ Merge Fleets	5
+ Edit Fleets	7
+ Clone fleets	7
+ Delete fleet	8
+ Edit a user's permission for a fleet	9
+ Track fleets	9
Groups	10
+ Create group	10
+ Edit group	10
+ Delete group	11
+ Track group	11
Drivers	12
+ Create new driver profile	12
+ Edit driver profile	12
+ Clone driver profile	13
+ Delete driver profile	13
+ Assign driver to group	14
+ Assign drivers to group	14
+ Assign driver to fleet	15
+ Assign drivers to fleet	16
+ Track drivers	16
Vehicles	17
+ Create vehicle profile	17
+ Edit vehicle profile	17

+ Clone vehicle profile	18
+ Delete vehicle profile	18
 + Assign vehicle to a group + Assign vehicles to a group + Assign vehicle to fleet + Assign vehicles to a fleet + Track vehicles 	19
	19
	20
	20
	21
+ Import	21
+ Export	21
User Management	22
Users	22
+ Create new user	22
+ Edit user	22
+ Delete user	23
Roles	23
+ Create Role	23
+ Clone Role	24
Access management tab	24
+ Create user access	24
+ Edit user	25
+ Delete user permission	25
Track	26
Scope selector	27
Settings	28
+ Profile Picture	28
+ Password	28
+ Language Preference	29
+ Change Measurement Units	30

Introduction

Mobileye's Fleet Management System (FMS) provides actionable data that helps you efficiently manage your fleets. By collating, processing and presenting data collected by Mobileye's collision avoidance system, the FMS will let you monitor fleet safety, track fleet routes, supervise drivers, organize vehicles, increase fleet efficiency and much more.

The system is comprised of five main views: Dashboard, Fleet Center, Track, Reports, and User Management.

- **1. Dashboard** a convenient way to view fleet information.
- 2. Fleet Center allows you to manage and oversee drivers and vehicles. With its easy-to-use interface you can group drivers and vehicles.
- 3. Track tracks vehicles and alerts issued by vehicles in real-time.
- **4. Reports** displays driver or vehicle scores based on the Mobileye collision system's safety alerts and a variety of fleet data reports including vehicle utilization and the trip analysis.
 - Scores A Score is calculated by a proprietary formula which attaches different weights to the various alerts according to their respective significance, in our opinion, as indicators of a standard of driving. It is calculated out of 100.
- **5. User Management** only available for authorized users. It allows for the creation and management of users and control of these users' various permissions.

In this guide, words appearing in **bold** indicate an onscreen button you must select to perform an action. Words in italics indicate onscreen text.

A Indicates a warning you should pay particular attention to.

Fleet Center




+ Create fleet

To create a new fleet, click Create New




Fill in the required details and select Save

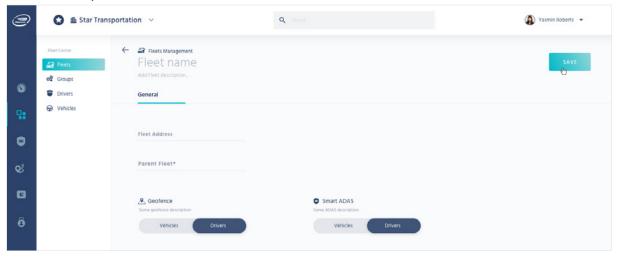

+ Merge Fleets

Multiple fleets can be merged into one fleet. To do this, select the fleets to be merged and click the **merge icon**.

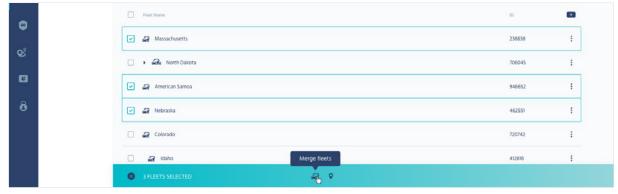


You will then be presented with a number of options:

- 1. Set as children will set one fleet as a 'parent' and others as 'children' (sub-fleets) of that fleet.
- 2. Move Relations will merge the fleets but save the fleets' previous relationships.



Click Continue and fill in the relevant fields.

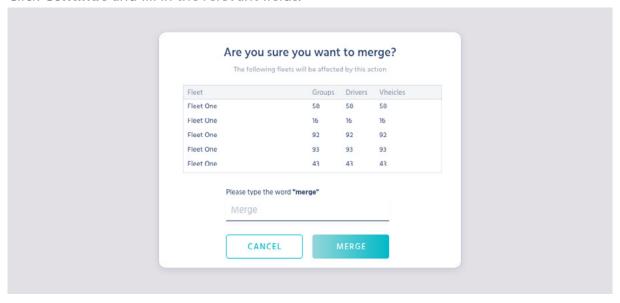


Click Merge to merge the fleets.


A It is highly recommended you double-check your choices before merging.

+ Edit Fleets

To edit fleet data, choose the relevant fleet, click the action sign :, and select Edit.

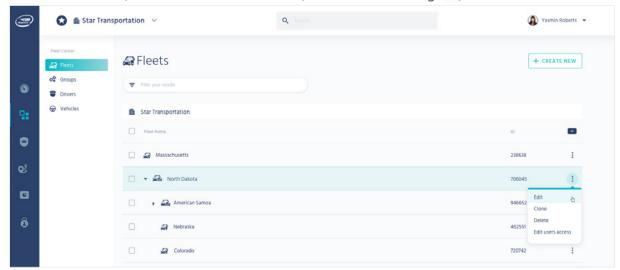

Here you can edit fleet details and select **Save**.

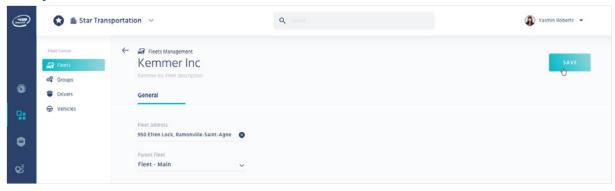


+ Clone fleets

To clone fleets, select the fleet to be cloned, click the action sign :, and select Clone.



Edit any relevant details and then click Save.

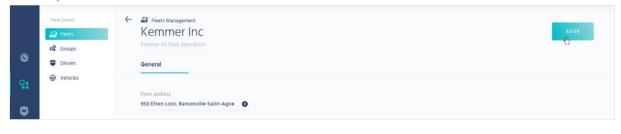


+ Delete fleet

To delete fleets, choose the fleet to be deleted, click the action sign:, and choose **Delete**.




Select one of the deletion options:

- Delete and Transfer will transfer the fleet assets to another fleet
- Unassign & Delete will unassign the fleet's drivers and vehicles but will not delete their records
- Delete All will unassign the drivers and vehicles and delete their records.

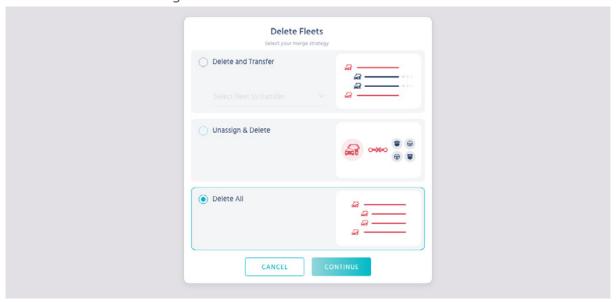

Select Continue

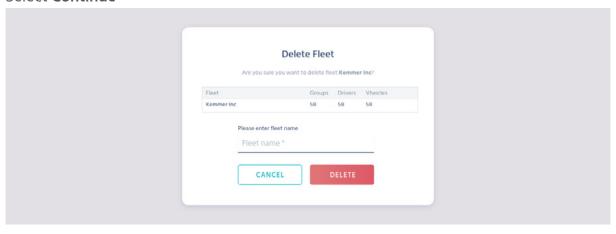

Type in the name of the fleet and click **Delete**.

A It is highly recommended that you double-check your choices before deleting.

+ Edit a user's permission for a fleet

To edit a user's permissions, select the relevant fleet, click the action sign: , and select **Edit users access**. This will take you to the User Management view. You'll see a list of users with access to this fleet's records along with the user's role.



To edit a user's access, click the action sign ${\bf i}$, and select ${\bf Edit}$.

Here you will be able to edit, delete or create a user's access.




See the User Management section for more information about user management and roles.

+ Track fleets

To track fleets, choose the fleet(s) you want to track and click the **Track** icon in the bottom menu. You will be transferred to the track screen to view the selected fleets.



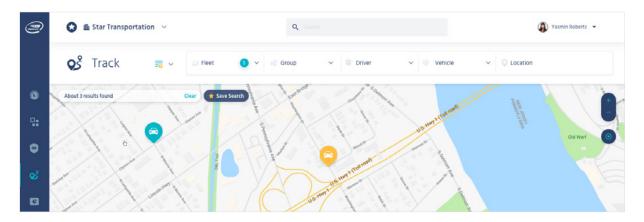


See the Track section for more details on tracking.




+ Create group

To create a new group, click **Create New** and fill in the required details.

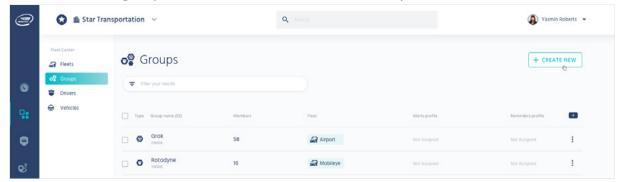


Here you can assign the new group to a specific fleet. Select Save.

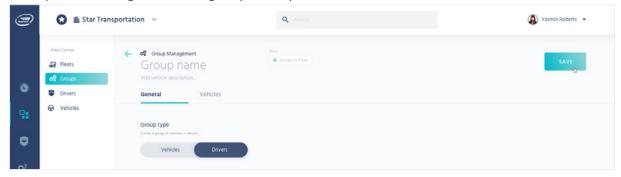

+ Edit group

To edit a group, select a group, click the action sign :, and select **Edit**.

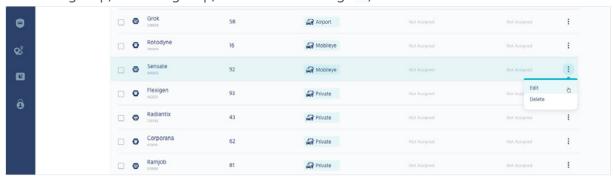

Edit the desired information and click Save.




+ Delete group

To delete a group, select a group, click the action sign:, and select **Delete**.



Enter the group name and click **Delete**.

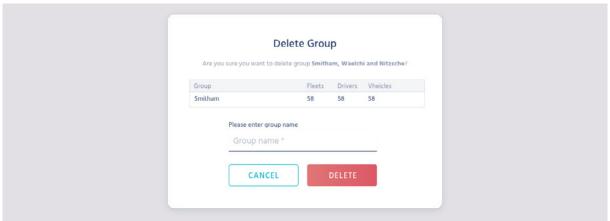


A It is highly recommended that you double-check your selections before deleting.

+ Track group

To track groups, choose the group(s) you want to track and click the **Track** icon in the button menu.



You will be transferred to the track screen to view the selected groups.

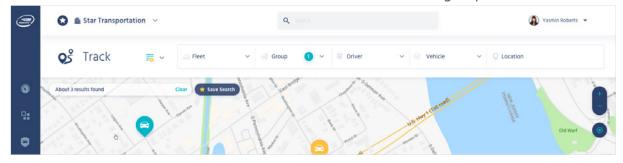


See the Track section for more details on tracking.




+ Create new driver profile

To create a new driver profile, click Create New and fill in the required details.

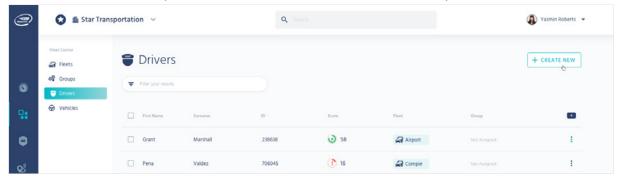


You will have the option to assign the driver to a specific fleet or group. Click Save.

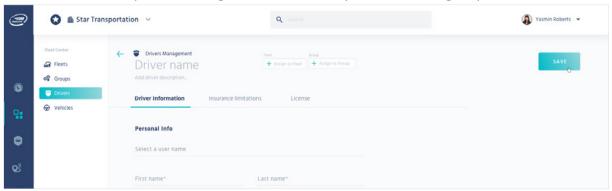

+ Edit driver profile

 To edit a driver's profile, select a driver, click the action sign:, and select **Edit**.




Edit the driver's profile and select Save.



+ Clone driver profile

 To clone a driver's profile, select a driver, click the action sign: , and select **Clone**. This will create a new driver profile that is an exact copy of the selected driver profile.




You can edit the cloned driver details. Select Save.




+ Delete driver profile

 To delete a driver's profile, select a driver, click the action sign:, and select **Delete**.




Type in the driver's full name and click **Delete**.

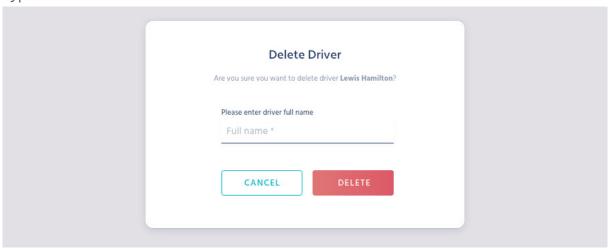


A It is highly recommended that you double-check your selections before deleting.

+ Assign driver to group

To assign a driver to a group, select the driver, click on the action sign :, and select **Assign** to **Group**.

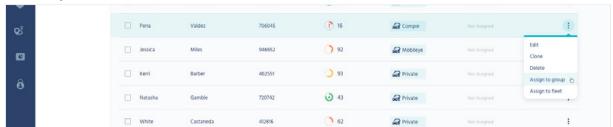


Choose the group you want to assign the driver to and click **Apply for Entities**.

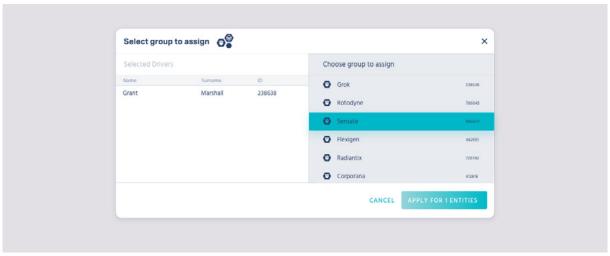


+ Assign drivers to group

To assign drivers to a group, select the drivers, click the **Assign to Group** icon in the button menu.

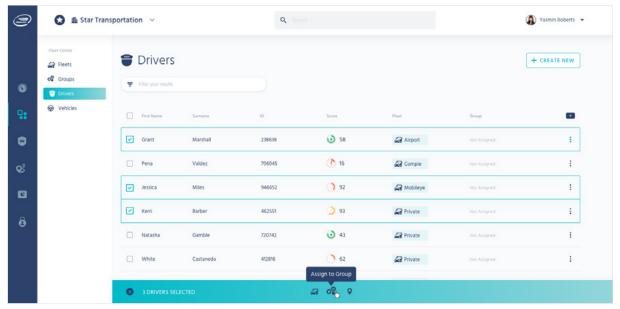

Choose the group you want to assign the drivers to and click **Apply for Entities**.

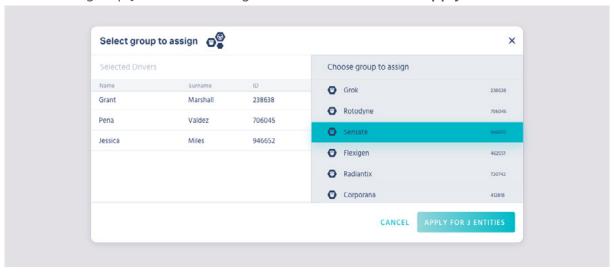


+ Assign driver to fleet

To assign a driver to a fleet, select the drivers, click the action sign :, and select **Assign to** Fleet.



Choose the fleet you want to assign the driver to and click **Apply for Entities**.

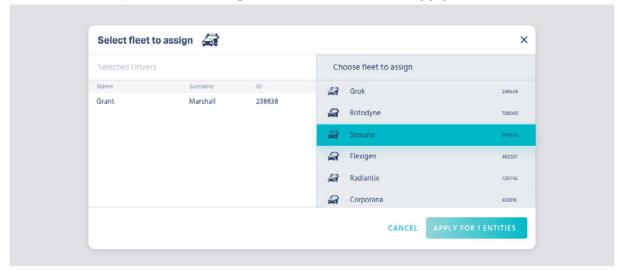


+ Assign drivers to fleet

To assign drivers to a fleet, select the drivers, click the **Assign to Fleet** icon in the button menu.




Choose the fleet you want to assign the drivers to and click **Apply for Entities**.

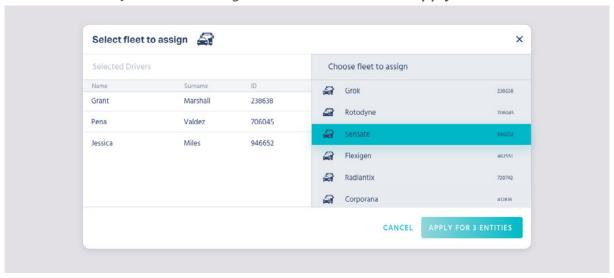

+ Track drivers

To track drivers, choose the driver(s) you want to track and click the **Track** icon in the button menu. You will be transferred to the track screen to view the selected drivers.

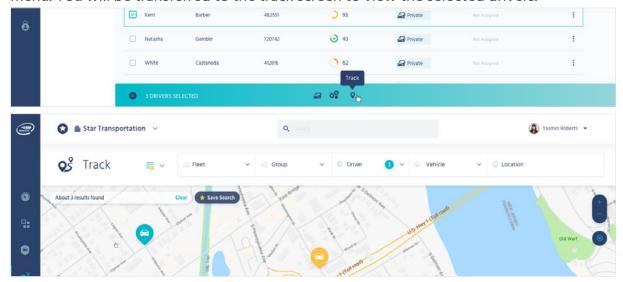


See the Track section for information on tracking




+ Create vehicle profile

To create a new vehicle profile, click Create New and fill in the required details.

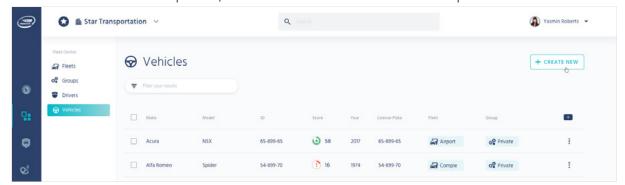

You will have the option to assign the vehicle to a specific fleet or group. Click Save.

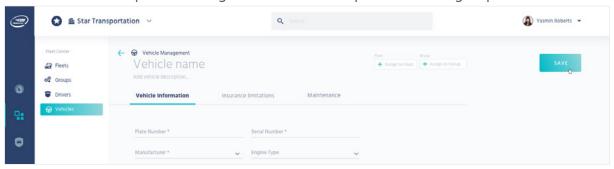


+ Edit vehicle profile

To edit a vehicle profile, select a vehicle, click the action sign :, and select Edit.




Edit the vehicle profile and select Save.

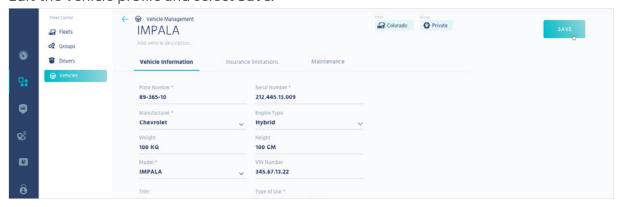

+ Clone vehicle profile

 To clone a vehicle profile, select a vehicle, click the action sign :, and select **Clone**. This will create a new vehicle profile that is an exact copy of the selected profile.




You can edit the cloned vehicle details, and then Select Save.




+ Delete vehicle profile

To delete a vehicle profile, select a vehicle, click the action sign :, and select **Delete**.

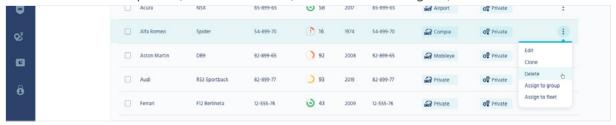

Type in the vehicle's license plate number and click **Delete**.

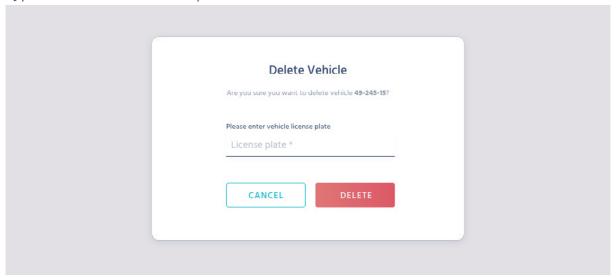


A It is highly recommended that you double-check your selections before deleting.

+ Assign vehicle to a group

To assign a vehicle to a group, select the vehicle, click on the action sign :, and select **Assign to group**.



Choose the group you want to assign the vehicles to and click **Apply for Entities**.

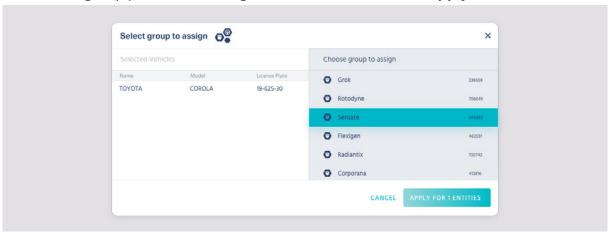


+ Assign vehicles to a group

To assign vehicles to a group, select the vehicles, click the **Assign to group** icon in the button menu.



Choose the group you want to assign the vehicles to and click **Apply for Entities**.

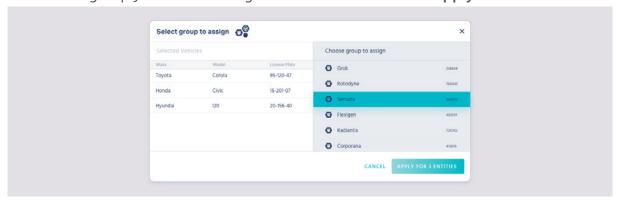


+ Assign vehicle to fleet

To assign a vehicle to a fleet, select the vehicle, click on the action sign :, and select **Assign** to Fleet.



Choose the fleet you want to assign the vehicle to and click **Apply for Entities**.

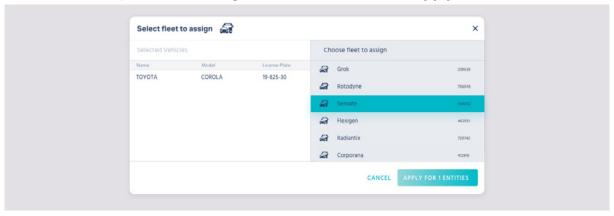


+ Assign vehicles to a fleet

To assign vehicles to a fleet, select the vehicles, click the **Assign to Fleet** icon in the button menu.




Choose the fleet you want to assign the vehicles to and click **Apply for Entities**.

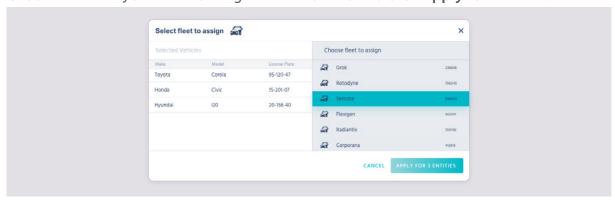

+ Track vehicles


To track vehicles, choose the vehicle(s) you want to track and click the **Track** icon in the bottom menu. You will be transferred to the track screen to view the selected vehicles.

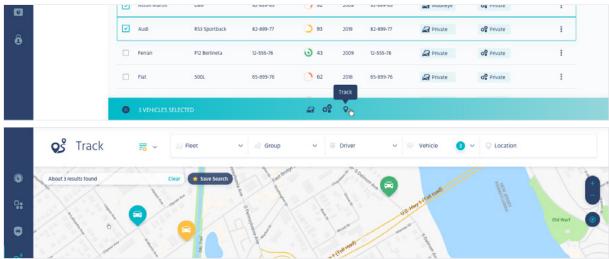

See the Track section for more details about tracking.

+ Import

 To import a list of vehicles select Import.



Select a file to import.

+ Export

To export a list of vehicles, select vehicles for export. Click **Export**.



A csv file will be downloaded to your computer.



1 Users

+ Create new user

To create a new user profile, click the **Create New** button.



Fill in the details and select Save.



+ Edit user

To edit a user profile, select a user, click the action sign :, and select Edit.



Edit the details and then click Save.




+ Delete user

To delete a user profile, select a user, click the action sign:, and select **Delete**.



Type in the user's email and click **Delete**.

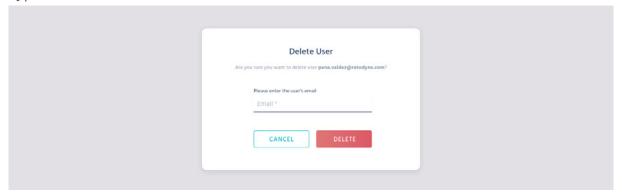

A It is highly recommended that you double-check your selections before deleting.


Roles

+ Create Role

To create a new role, click Create New



Fill in the role name and choose the permissions you wish to assign to this role. Click Save

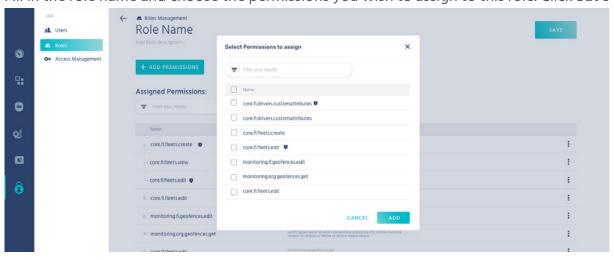


+ Clone Role

To clone a role, select a role, click the action sign : , and select **Clone**. This will create a role that is an exact duplicate of the selected role.



You can edit the cloned role details. Select Save.

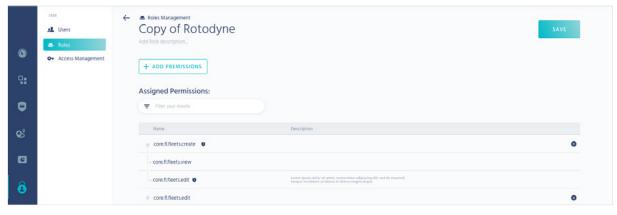


O- Access management tab

Access management is used to manage access to fleet information. This access is governed by permissions which allow individual users to change and/or view certain types of information (e.g. one user may have permission only to read driver information while their supervisor can read and edit this information)



+ Create user access

To grant a user access to a fleet, select a fleet and click **Create**.

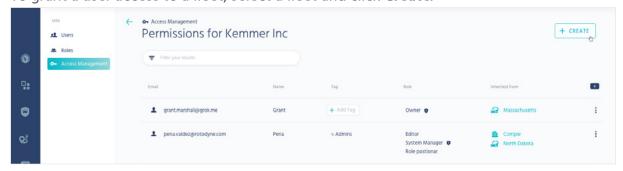

Select a user, click **Add Roles** to assign roles to this user - each role will give certain permissions to the user. Click **Save**.



+ Edit user

To edit users' permissions, select a user, click the action sign i, and select Edit.



Assign permissions and click **Save**.




+ Delete user permission

To delete a user's permissions, select a user, click the action sign:, and select Delete.



Enter the user's email and click Delete.

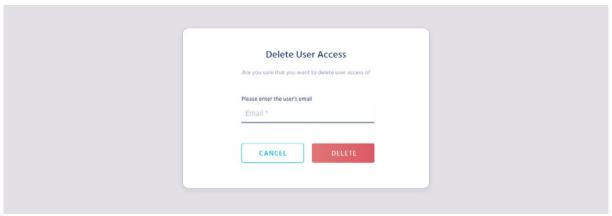

A It is highly recommended that you double-check your selections before deleting.

 


Track allows you to track vehicles in real-time. There are several ways to select which vehicles you are tracking:

- By Groups See the Groups section for details
- By Fleets See the Fleets section for details
- By Vehicles See the Vehicles section for details
- By Drivers See the Drivers section for details

You can also select vehicles or drivers for tracking via the dropdown menu at the top of the tracking screen. These vehicles can be selected by:

- Fleet
- Group
- Driver
- Vehicle




These selections can be saved by clicking Save Search.

To save a search, select the search options and click **Save Search**.

Scope selector

To use the scope selector, click on the company name at the top left. Then select a fleet from the dropdown list.

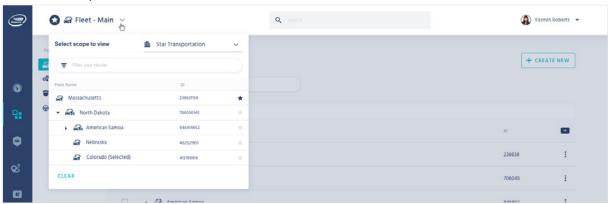

Click the **star icon** \uparrow to make this your default choice.




Settings allows you to edit/change:

- Your profile picture
- Language Preference
- Measurement Units (miles/kilometers, Fahrenheit/Celsius)

+ Profile Picture

To change your profile picture, click on your name at the top right of the screen and select **Settings**. Click the **Edit** icon on your profile picture.

Note, if you haven't yet selected a profile picture, the icon will be . if you already have a profile picture it will be .

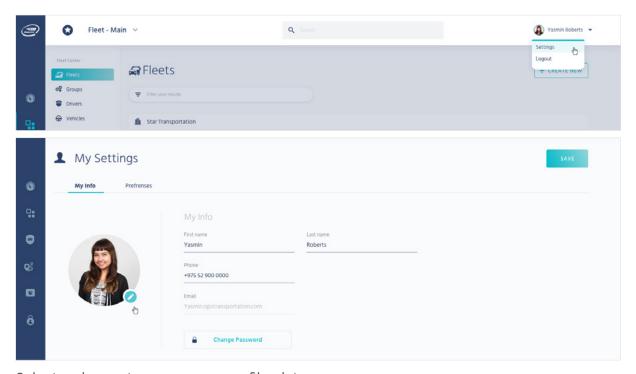


Select an image to use as your profile picture.

+ Password

To change your password, click on your name at the top right of the screen and select **Settings**.



Click Change Password.

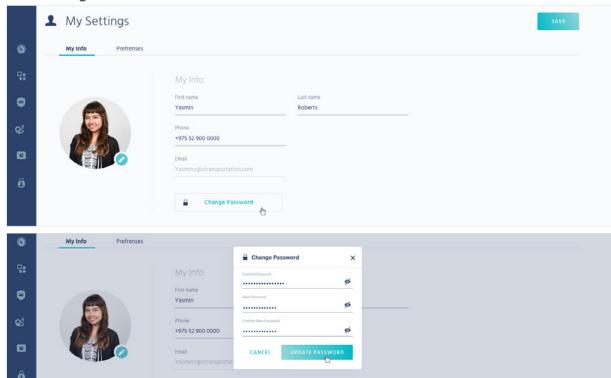


You will then need to enter your current password, your new password and confirm your new password. Click **Update Password**.

+ Language Preference

To change your language preference, click on your name at the top right of the screen and select **Settings**.



Click **Preferences**.

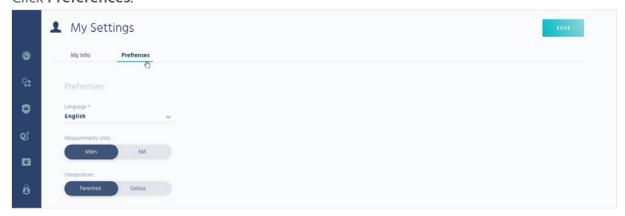


Use the language dropdown menu to select a language.

+ Change Measurement Units

To change your language preference, click on your name at the top right of the screen and select **Settings**.



Click **Preferences**.

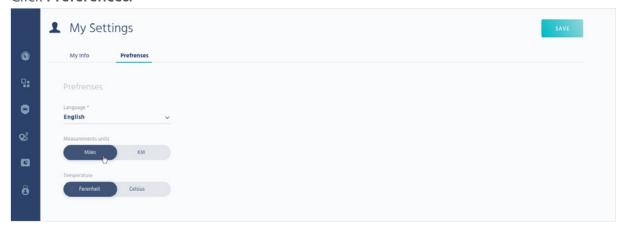

Use the buttons to switch between Miles/KM(kilometers) and Fahrenheit/Celsius Note this selection will affect the entire FMS.